


### Various parts of the product introduction

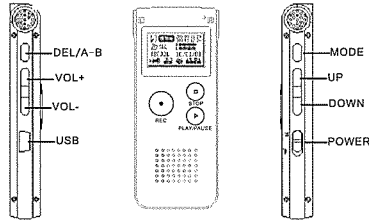

### Basic use

#### 一、 Turn on the product

- (1) Check the built-in lithium battery adequacy
- (2) Push the power key to the "ON" position, after initialization display "standby interface".

#### 二、 Turn off the product

- (1) When voice recorder in the stop mode, push the key to "OFF" to turn it off.
- (2) You can also long press the Play / Pause button (PLAY / PAUSE) to shutdown. (But this key to shutdown can only close the working state, can not completely turn off the power, if you want to turn off for a long time, pushing "power switch" to turn off can achieve power saving function.
- (3) The battery power is depleted when in recording work, it will shutdown automatically

※ Please refer to the battery level to timely charge

### 三、 recording

(1)、 Open the Power to recording interface, press the recording button (REC) to enter the initialization state, recording indicator lights, the upper right corner of figures in the beating, indicate to have entered into the recording state.

(2)、 When recording, press recording key (REC) to pause the recording, the indicator flashes, then press the record button (REC) again to cancel the pause recording.

(3)、 To save the recording press the play key (STOP), the screen prompts "Please wait". press (PLAY) key again to play the current recording file.

(4) Select the recording type: (the native factory default quality recording)

■ Enter the main interface and enter the system settings, short press "M" button to enter and press "UP, Down" key to transfer to the recording type, , then press the 'play' button to enter the select three formats: SP quality recording (without voice); SP quality recording(with voice); the LP long recording (without voice), LP long recording (with voice). Press "M" button to save the recording after selecting the recording type.

- (5) Check the setting is right before recording.
- (6) Please check the battery power is adequate when you want to make a long time recording.
- (7) When voice recorder in the boot initialization state and in stop state, directly press the "REC" button to start recording. Press the "STOP" button to save the

recording; then short press "PLAY / PAUSE" button to play the recording.

- Voice recorder automatically generated date, time, and can also see the recording date / time in the computer to check the properties.
- If you do not recording after boot, please long press the "M" key to exit and enter the main interface menu, press the "UP" and "Down" keys to select the required function.
- Open the removable disk there is a folder (RECORD) within SP, LP file, the song directly copied to the removable disk.

(8) With VOR function recording mode, the absence of an external sound is automatically pause recording, if you record important recordings do not use the VOR function.

(9) It can not enter the recording if the memory is full, and it will display the disk is full, the main menu pops up automatically.

#### 四、 Use the built-in microphone for recording

(1) In any mode, short press the recording key (REC), can enter into the recording state

- The upper right corner of the red indicator LED is lit

(2) If you want to pause the recording, then a short press recording key (REC) to pause recording, indicator LED flashes.

- The upper right corner of the red indicator LED

flashes.

(3) If you want to cancel the pause recording to continue recording, press the recording button (REC) once again .

(4) Press the "STOP" button to stop and save the recording


#### 五、 Use an external microphone for recording

After connecting an external microphone, the same method as the way of using the built-in microphone recording.

#### 六、 Telephone recording (select)

- connect the indoor telephone line , the local distribution of the telephone line, and LINE-IN line with the junction box, then connect to the machine microphone

- telephone recording generally use (SP or LP recording mode).

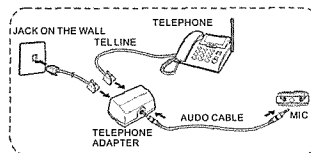

play

#### 一、 Normal playback

(1) Turn the power on, press the "UP, Down" key to select to play music or play a recording, and then a short press (M) key to enter the menu , and then press the "UP, Down" button to select the folder and file, then press the "play" key to play.

(2) Press "PLAY / PAUSE" button to play. in the music play standby state, press the "PLAY / PAUSE" button to start playing and display the progress of the playback time.

(3) EQ (sound) mode: in the state of play MP3, short press the M key to enter the sound mode. Select the sound mode (EQ) short press Play key to enter, "UP, Down" key to select NOP (natural), ROCK (Rock) POP (pop), CLASSOL (classic) SOFT (soft) JAZZ (jazz ), DBB (bass), and then press the "M" button to play. System will save the current settings, return to play state.

(4) Press the VOL button to select the appropriate volume

(5) During playback, press PLAY / PAUS key to pause playback, press the "STOP" key to stop playback.

#### 二、 Fast-forward, rewind

(1) During playback, long press the UP or DOWN button, the file will fast forward or rewind.

(2) Release the UP or DOWN button to restore the current playing status.

(3) short press the UP or DOWN button, it automatically moves to the next file to playback

### 三、Repeat Play

#### 1. Repeat for some

- (1) when playing a recording / song files, press "DEL / A--B" key at the beginning of you want to repeat , the screen will display "A-B" icon lighting lights
- (2) then press "DEL / A--B" key at the place you want to end repeat, the A--B paragraphs will repeat play.

(3) When repeat, press the M key, then return to the normal playback.

(4) Each repeat 5 times automatically resume normal playback.

#### 2. Repeat a file or folder

- (1) When playback, short press the "M" key to cycle mode, then press the "play" button to enter, press the "UP

Down keys to select the required cycle function (normal mode, single cycle, all cycle), you need to press"UP, Down" key to select the content you want to repeat, press the "M" button to confirm.

(2) The machine default directory cycle, if not press the "play" button to confirm, the system saves the previous model.

※ **Under quality recording format, the machine can not play other audio files, can only play itself recording format.**

Machine under long recording format can not play standard audio files, can only play itself recording format.

- (3) Save the recording, short press "PLAY / PAUSE" button to play the current recording, press "UP, Down" key to select the recording file, press the "PLAY / PAUSE" button to play.

### Setting function

#### 一、Delete a file or delete a folder

(1) In pause / stop status, short press "DEL / AB" key singles deleted. Enter the delete state. Then press the "UP, Down" key to choose Delete directory (delete the file), and then press the "M" button to delete this file, delete completed automatically return to playback status.

(2) To delete all short press "M" key to enter and press"UP, Down" key to select (delete all). If do not delete, press the "PLAY" key to exit. If the files you have deleted , the system will display the disk without the files. Backup recording files before deleting.

#### 二、"LINE-IN" line recording settings

In the system setting tatus, short press the "M" button to select the recording source, select the audio input can connect the sound source (CD, tape recorders, DVD), etc. then press the record button to recording.

### 三、Adjust the volume

When the machine is playing, press "VOL +" or "VOL-" volume can be increased or reduced.

### 四、System Settings

In the pause / stop status press "M" key to enter the main interface, press the "UP Down" keys to select the system settings, press the "M" key to enter system settings, with system time, recording type, recording source, the backlight time, language select, the shutdown setting, contrast adjustment, online mode, the storage conditions (memory). Then press the "M" key to enter the sub-menu, then press "UP, DOWN" key to select the submenu, press the "M" button to confirm.

Memery	2GB	4GB	8GB
Record Type			
LongREC (VOR)	144 hour	288 hour	576 hour
FineREC (VOR)	24 hour	48 hour	96 hour
HQREC (VOR)	12 hour	24 hour	48 hour

### Removable disk (upload / download)

1、 Except for being upgraded, in any case, will be able to move the disk into your PC's USB port, the system will immediately interrupt the current operation, online and PC disk drive letter appears in the operating

system, disk operations can be carried out. The connection with the PC, the player has three display modes:

2. Upload / download: When detected removable hard disk, you can upload / download MP3/WMA files or other files.

※ suggestion: use copy way

#### Formatting memory

1. The formatting process, you should put the voice recorder into a computer USB port, enter the USB connection mode, format the voice recorder's memory (Note: above the version WINDOW2000, select "FAT32" low-level to format.)

2. Formatting in any computer system, the same method as you format a computer hard disk, floppy disk (selected "Removable Disk" to format).

#### Troubleshooting

problem	reason	measure
The LCD does not show	Low battery Whether turn on	Timely charge Turn on the power supply;
Can not record	Not transferred to the recording state Low battery Memory capacity to the limit or full	Transferred to the recording state; Timely charge; Remove part of the file or move to an external device.

Unable to open the recording file	Low battery There is no audio file the volume in a minimum	Timely charge; Check the file; Adjust the volume;
Letters appearing on the screen is abnormal	The language choose whether correct	Choose the right language
Speaker no sound	check the plug of headphone the volume to a minimum check the recording format is correct	Remove the headphones; adjust the volume Select the correct recording format
No sound from headphones	Make sure that the headset is properly connected;	Connect the headset;
	the volume in a minimum; Recording or MP3 files have been destroyed in the manufacture of different levels of noise, and even play silent;	Adjust the volume; Check the recording or MP3 files whether are destroyed, to ensure the integrity of the document;
Can not be normal upload / download the audio file	Check the USB cable for damage	Ensure USB cable is not damaged
	Connection of USB whether normal Check if there are blank memory;	Check the connection of USB Remove the blank memory;

#### Product warranty cards

Product Type \_\_\_\_\_

S/N: \_\_\_\_\_

Dealer Name \_\_\_\_\_

Date of Purchase \_\_\_\_\_

Dealer stamped at: \_\_\_\_\_

Replacement / repair date	Replacement/maintenance records	Replacement / repair unit (Stamp)

#### Description:

For replacement shall be marked at "replacement / maintenance records; warranty card must be presented together with the official purchase invoice and dealer's stamp, fill this warranty card in detail and carefully, any alterations on this card is invalid.