


# 10 X 50 Binoculars Instruction

## • Components

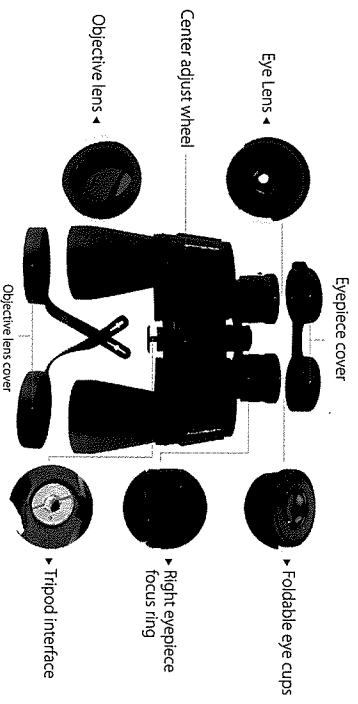

*SkyGenius*®

31

## Products Data Sheet

- Magnification power: 10x
- Type of Prism: BK7
- Eye Lens Diameter: 27.5mm ; Objective Lens Diameter: 50mm
- Eyecups: Foldable (great for glasses wearer)
- Materials: Plastic+Metal+Glass
- Center Wheel Adjust:  $\pm 10D$
- Objective Lens Adjust Range is: 56-74mm
- Right eyepiece with  $\pm 4D$  diopter adjustment range (great for the user that two eyes different myopia)
- Field of view: Angle:  $5.5^\circ$ ,  $367\text{ ft}/1,000\text{ Yds}$ ( $122M/1,000M$ )
- Min focus length: 5m/16.4ft
- Net Weight: 1.76 lb
- Focus mechanism: center focus wheel+right eye piece

02

## Usage Instruction


**Step 1**  
Adjust the center-focus Focus until the left sight clearly

**Step 2**  
Adjust the right eye lens until get one image



03

## • How to tie the strap? ( Do it as the photo)

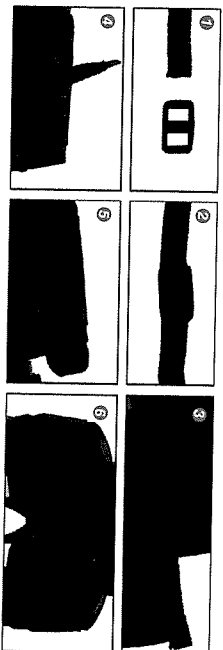

- Please tie the strap as the diagram before you use the binoculars, It will be better for you to protect the binoculars if the strap is tied correctly and tightly.

04

## Instructions for Care

Your binoculars will be provided with years of trouble-free service if it receives the normal care you would give any fine optical instrument. Non-waterproof models should not be exposed to excessive moisture.

- If your binocular has roll-down, flexible eyecups, store it with the eyecups up. This avoids excessive stress and wear on the eyecups in the down position.
- Avoid banging and drooping.
- Store in a cool, dry place.
- Looking directly at the sun with your binoculars may do harm to your eyes.

05

# Cleaning

- Blow away any dust or debris on the lens (or use a soft lens brush).
- To remove dirt or finger prints, clean with a soft cotton cloth rubbing in a circular motion. Use of a coarse cloth or unnecessary rubbing may scratch the lens surface and eventually cause permanent damage. A "microfiber" cleaning cloth (available at most photo dealers) is ideal for the routine cleaning of your optics.
- For a more thorough cleaning, photographic lens tissue and photographic-type lens cleaning fluid or isopropyl alcohol may be used. Always apply the fluid to the cleaning cloth – never directly on the lens.

06

# Q&A

1. Why the binoculars have double image/can't focus on one im:
  - Please adjust the binoculars correctly according to the diagram in page
  - If you have adjusted the binoculars as the diagram, but the binoculars have double image, please send your order id and the problem to our [skygenius.us2@hotmail](mailto:skygenius.us2@hotmail). We will reply you the solution on 24h.
2. I got a broken product, what should i do?
  - Send Your order ID and pic or video of defective item to our email: [skygenius.us2@hotmail.com](mailto:skygenius.us2@hotmail.com);
  - We're willing to sent replacement or refund depend on the situation.

07

## For FAQs and more information, please Contact us by follow information:

We are always standing behind our products.

We will reply you in 24H.

Email: [skygenius.us2@hotmail.com](mailto:skygenius.us2@hotmail.com)

Facebook: SkyGenius LTD

### Warranty:

Normal Warranty: 1 Year

### How to Extend the Warranty?

Send your order id + 2 Year Warranty

To our email address: [skygenius.us2@hotmail.com](mailto:skygenius.us2@hotmail.com)

### Free Gift:

Thanks for your trust to our company, our company decide to send 50pcs Great FREE gifts to first 50 customers. (only 50)

Do you want to be the lucky one?


Please send your order id + ideal "gift" name to our email address:-

[skygenius.us2@hotmail.com](mailto:skygenius.us2@hotmail.com)

#### Gift's list:

Binoculars, Monocular, Hair dryer, Foil shaver, USB battery powered clip on fans, LED lights, space saver bags, bento box, etc.  
(Except the product you have bought)

• We Are the Professional Binoculars Manufacturer.

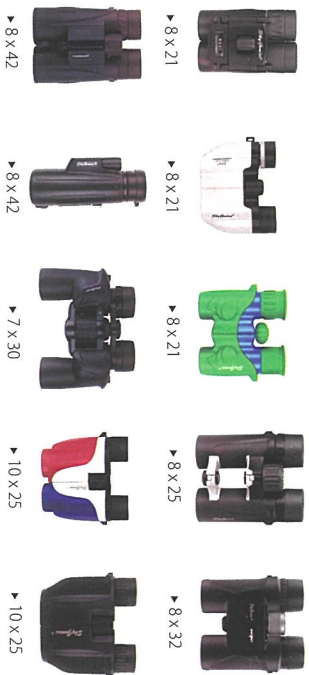

• For more information, refer to our official links: [www.skygenius.cc](http://www.skygenius.cc)  
Or scan the QR Code.



## Manufacturer information

SkyGenius® was registered in USA and fully possessed by THE NEW GENIUS (USA) TECHNOLOGY CO., LIMITED and it is under the Madrid agreement for international registration of trademarks.

**- USA**

The New Genius(USA) Technology Co., Limited  
36 South 18th Avenue, Suite A Brigton, CO USA 80601 County:Adams

**- CHINA**

The New Genius(SZ) Technology Co., Limited  
RM 6511, 65/F, SEG Plaza, Huaqiang North Road, ShenZhen, China

**- HONGKONG**

The New Genius (Hongkong) Technology Co., Limited  
RM 705C, 7/F HO KING COMM CTR, 2-16 FA YUEN ST, MONGKOK, KLN, HONG KONG